


Data: 21-11-2024

Instituto Superior de Engenharia de Coimbra

Licenciatura em Engenharia Informática

SERVIÇOS DE REDE II

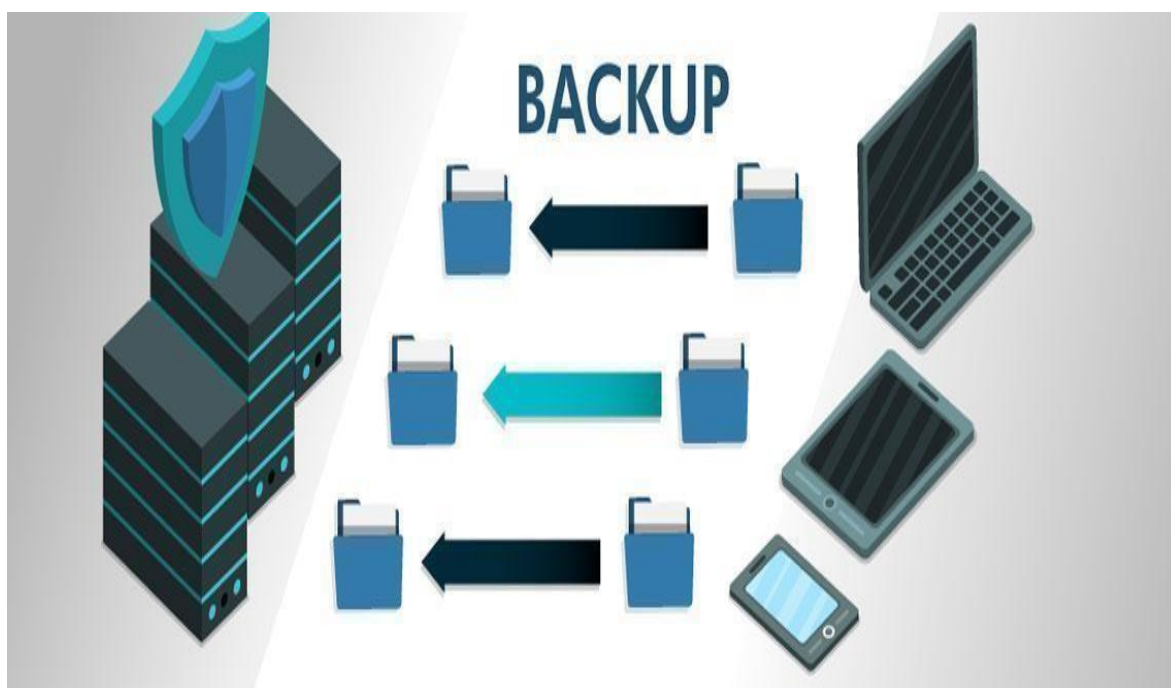

Guião Prático

Docente:

Luís Santos

Trabalho realizado por:

Guilherme Pratas -> nº 2022136119

Martim Freitas -> nº 2021145193

Francisco Alves -> nº 2022139500

Índice

Índice_____2

Topologia_____3


Windows Server Backup (instalação)_____6

Shared Folder e Scheduled Backup_____10


Bibliografia_____20

Topologia Utilizada (Apenas Desafio 2)


- Firewall desligada em ambos terminais
- Colocar a seguinte config nos terminais em: Clicar no botão Windows -> Escrever “Network Connections” e dar enter -> Escolher a Interface ethernet correta -> Botão direito -> Selecionar Properties -> IPv4 -> Properties -> Colocar a config sugerida

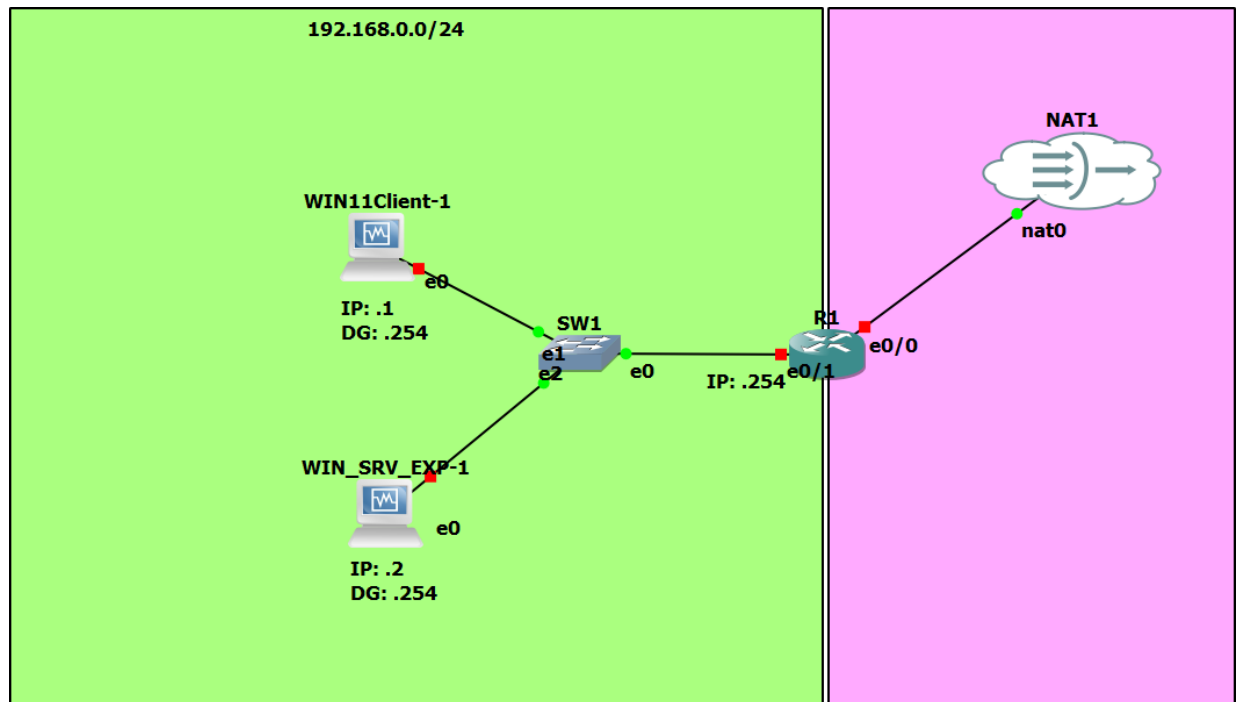

- Windows Server

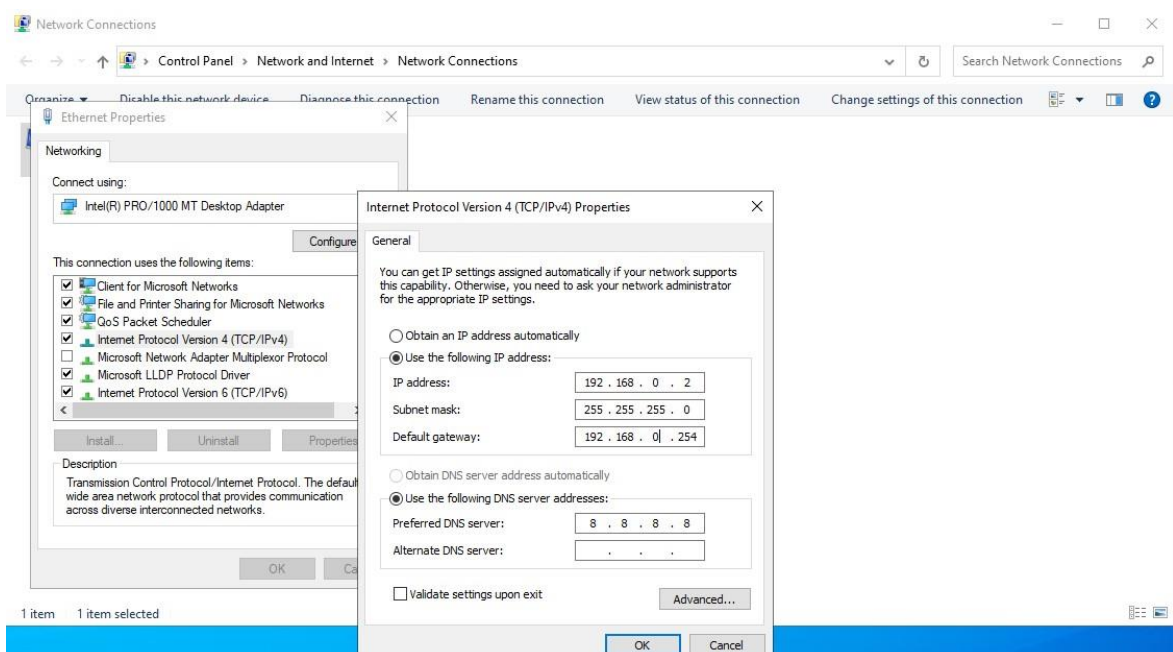

- Windows 11 Pro

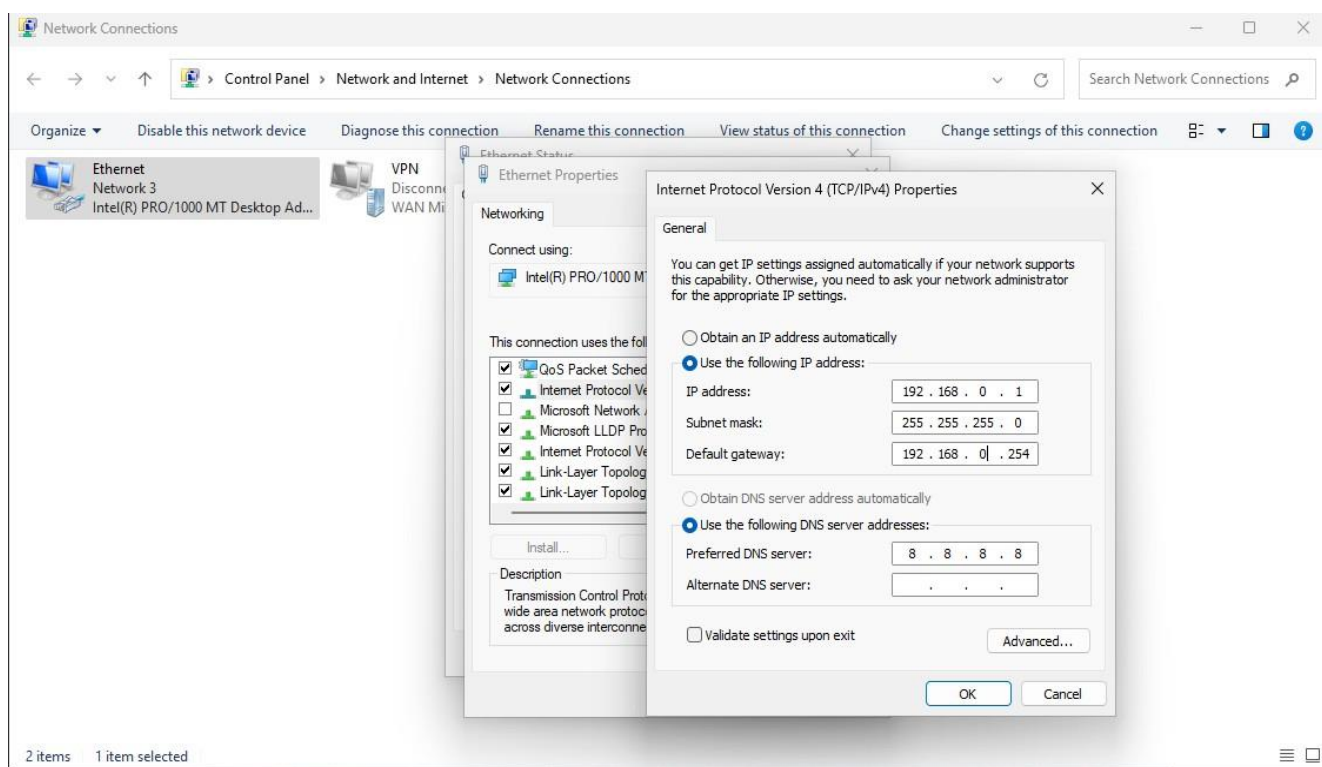

- Router Config:

```
interface Ethernet0/0  
ip address dhcp  
ip nat outside
```

```
interface Ethernet0/1  
ip address 192.168.0.254 255.255.255.0  
ip nat inside
```


```
R1(config)# access-list 1 permit 192.168.0.0 0.0.0.255  
R1(config)# ip nat inside source list 1 interface Ethernet0/0 overload
```

- Confirmar se está tudo a funcionar, e pingar o router a partir dos terminais


Windows Server Backup (Instalação)

|
|
|
|
|
V


1. Abrir o server manager e clicar em Add roles and Features

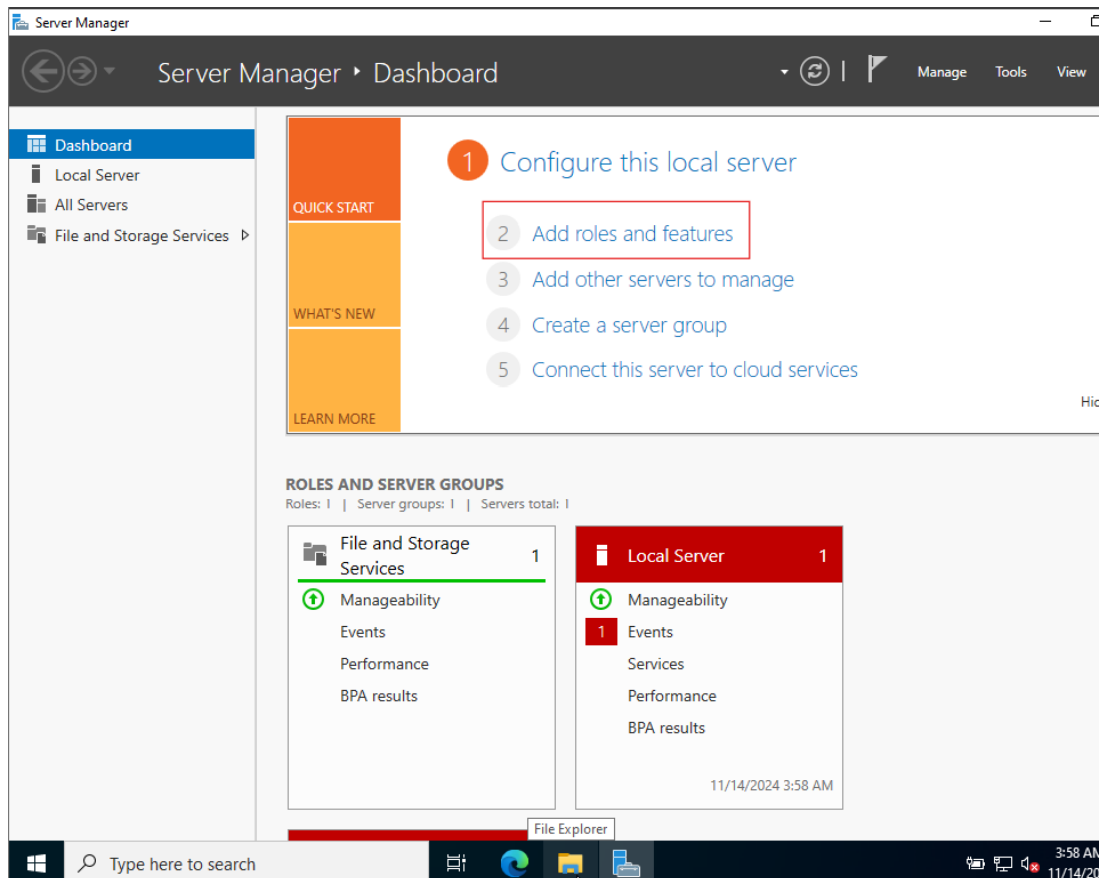

2. Clicar em Next até chegar à página Features.
Selecionar Windows Server Backup, Clicar em Next e Install;

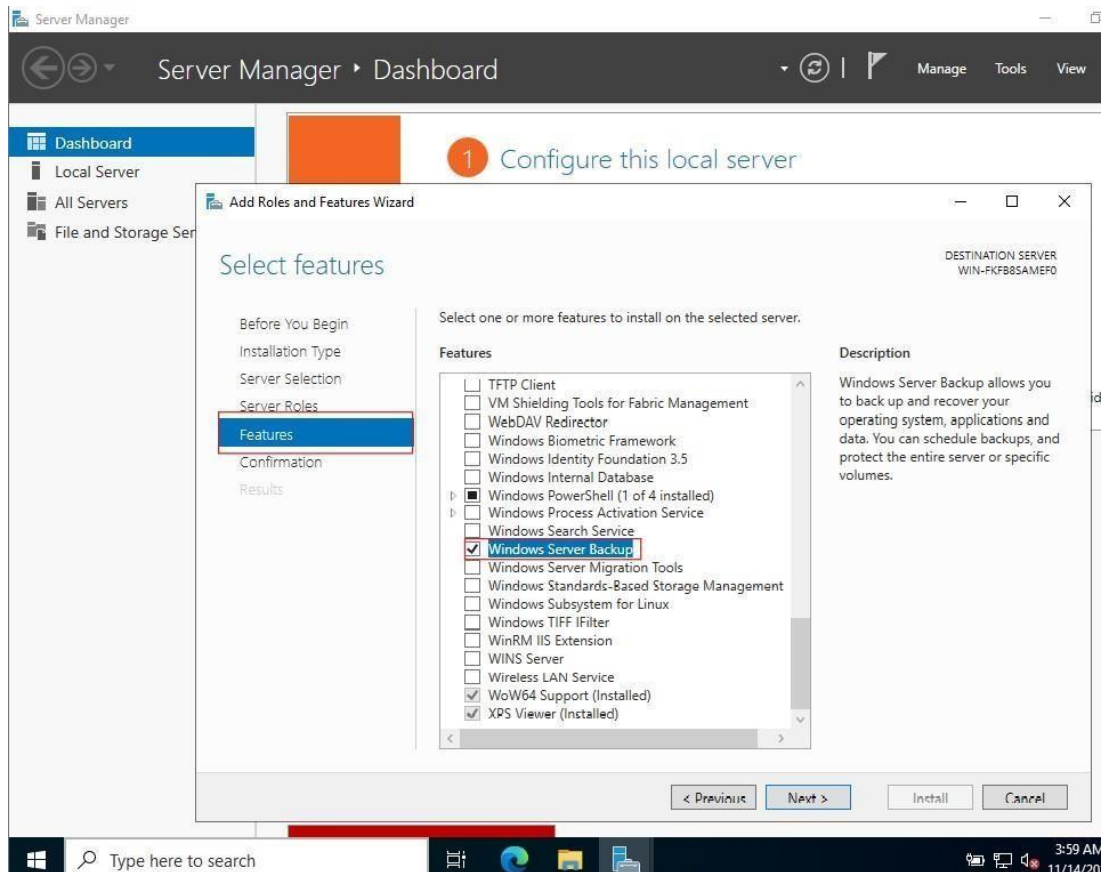

3. Após a Instalação Clicar em Close;

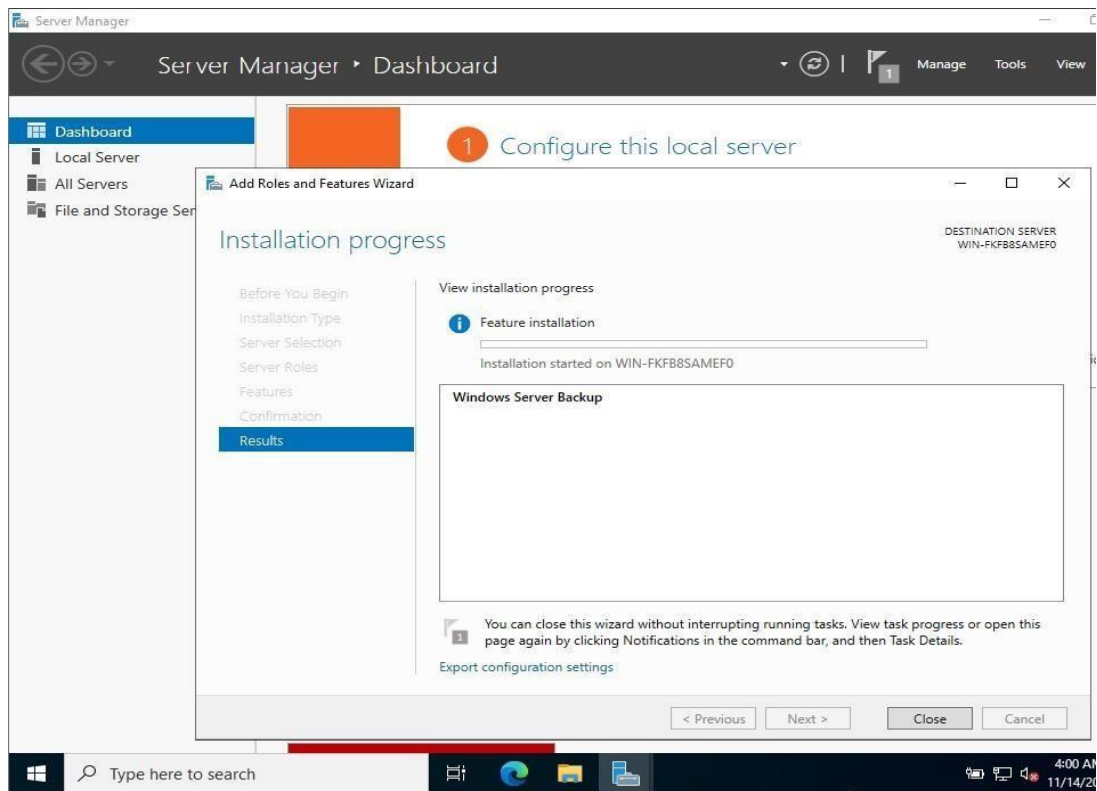


SCHEDULED BACKUP COM SHARED FOLDER


|
|
|
|
|
V

Nota: é preciso previamente ter em conta a topologia da página 3 e arrancar por lá as vm`s.


1. Numa pasta criada para sharing, fazer o seguinte:

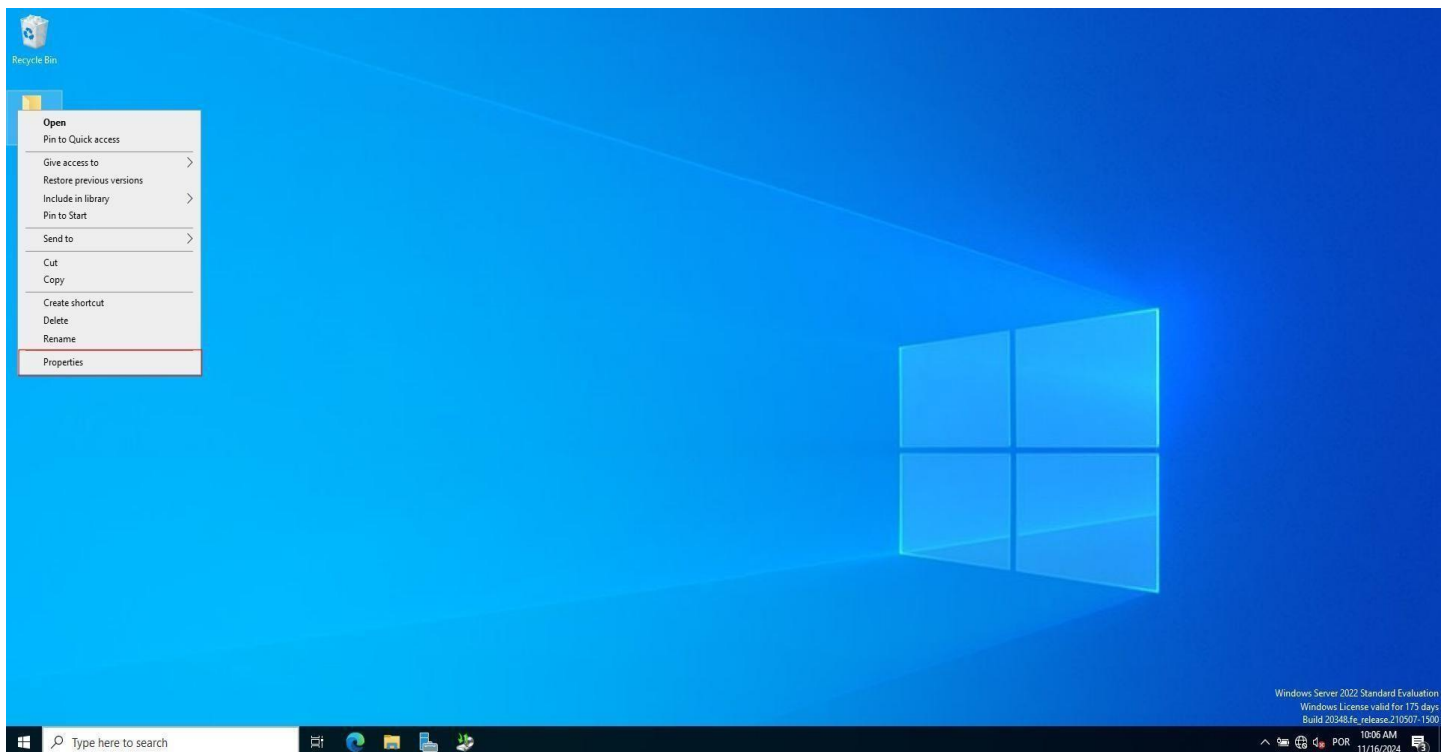



2. Selecionar a opção “share this folder” e selecionar “Permissions”

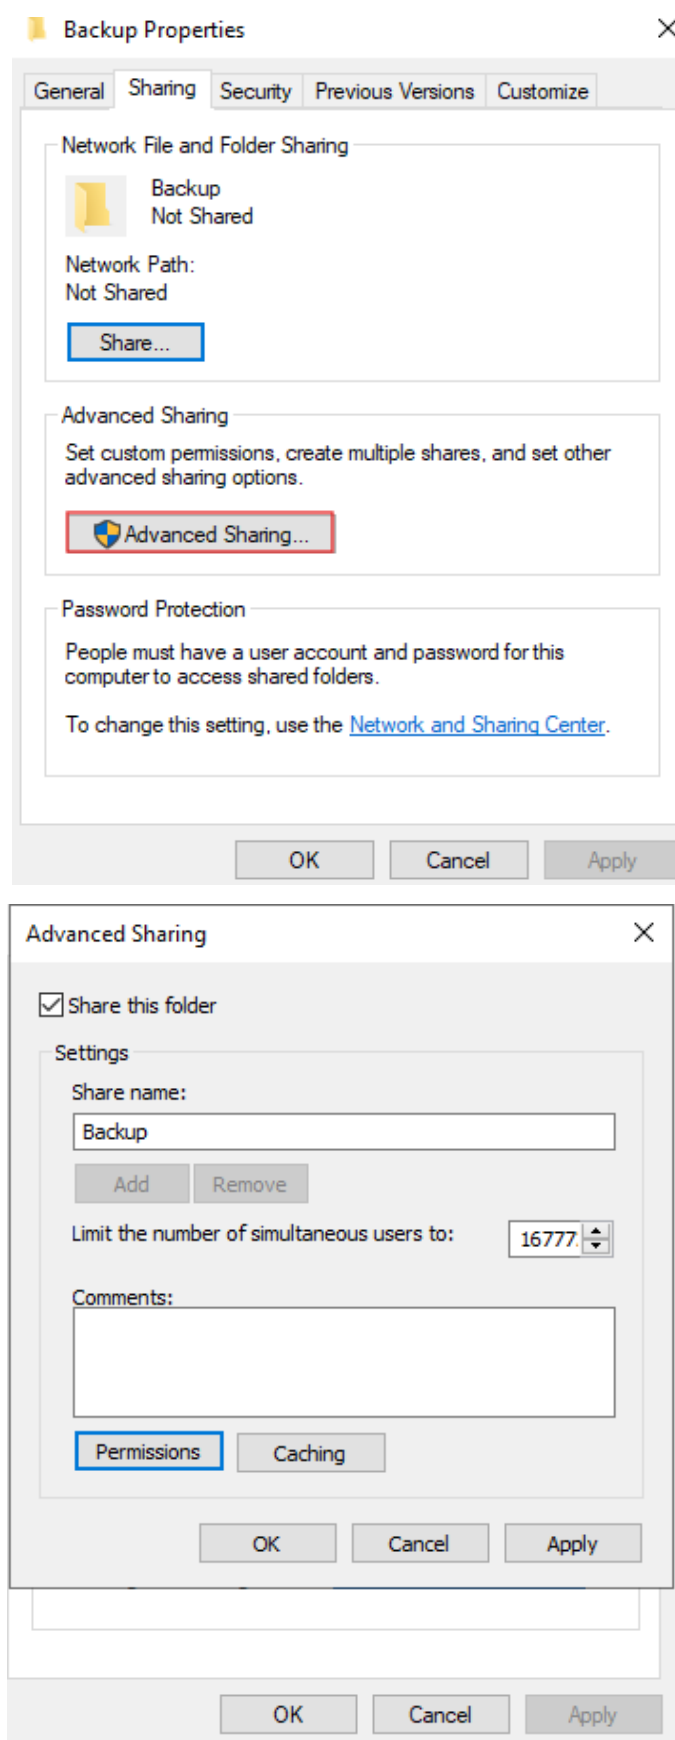


3. Selecionar full control

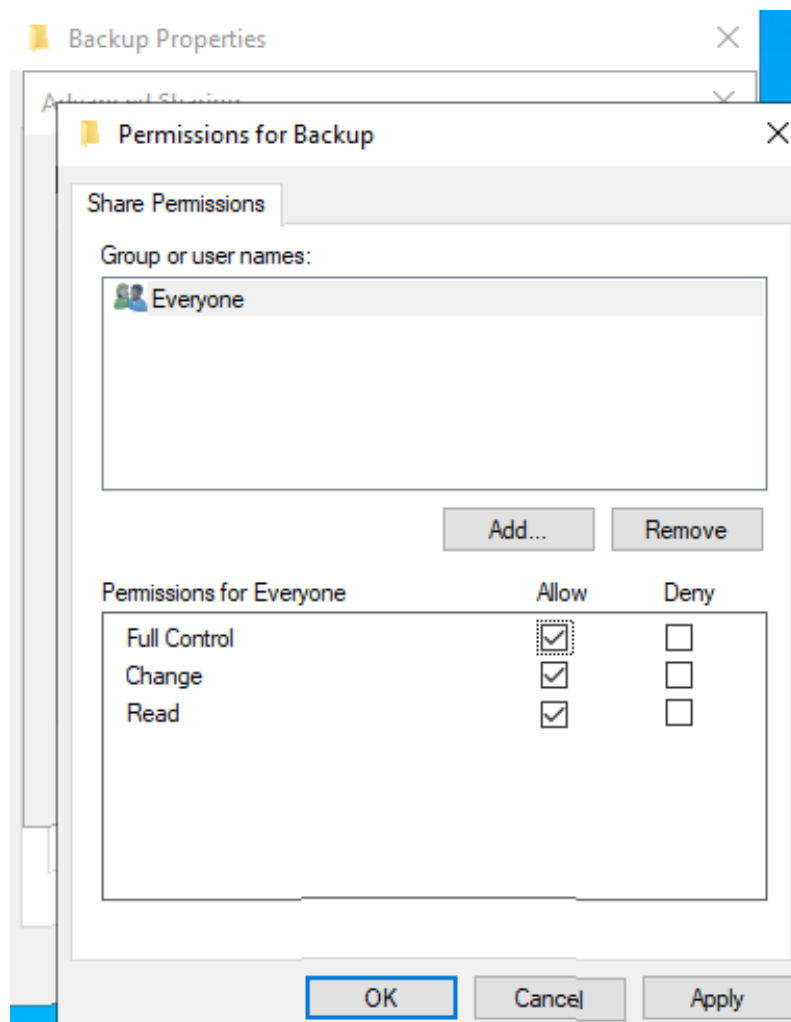


4. Security -> Edit -> Add

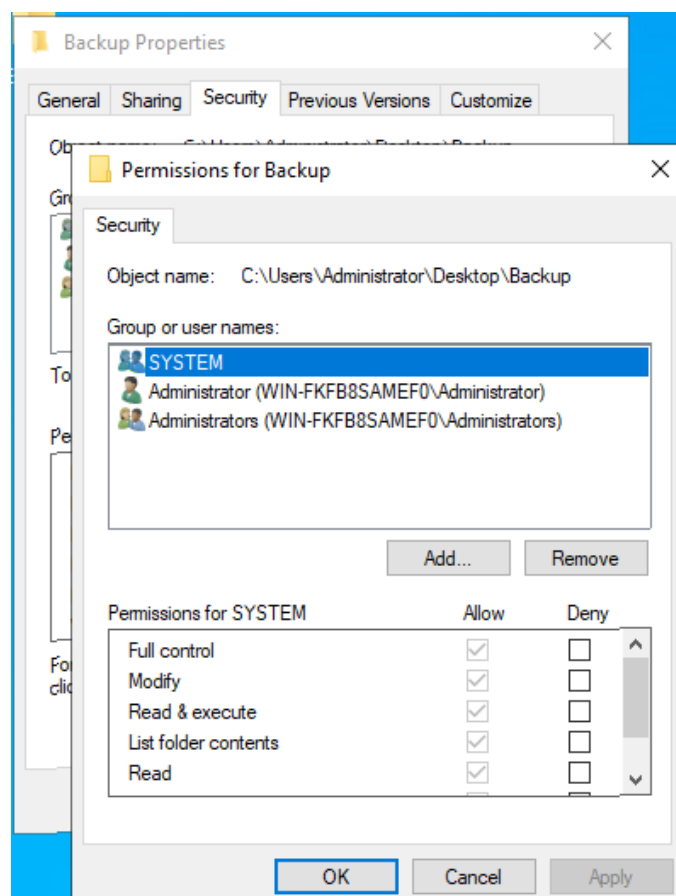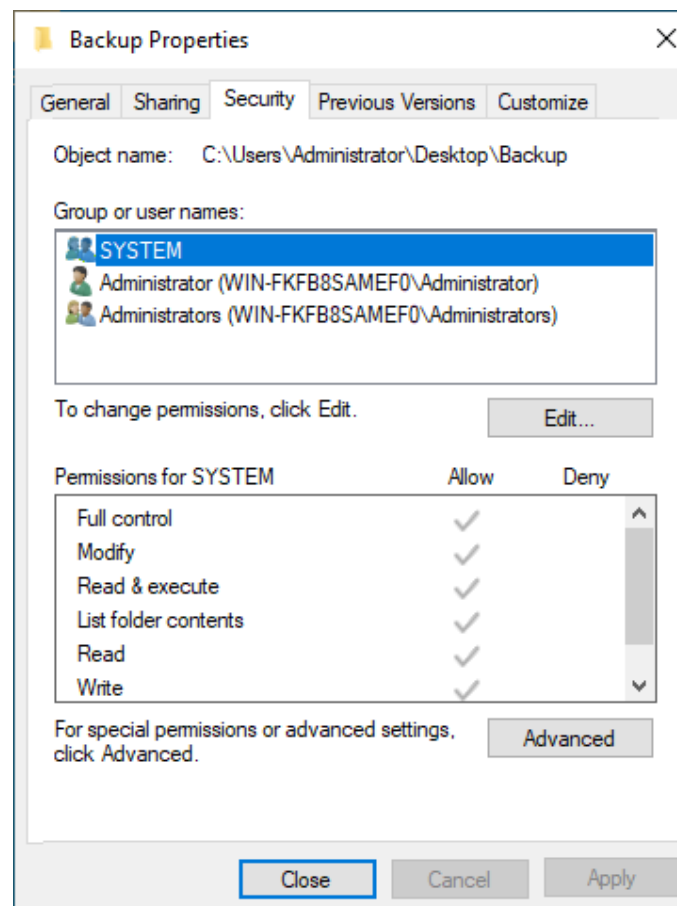



5. “Enter object names to select” -> escrever Everyone

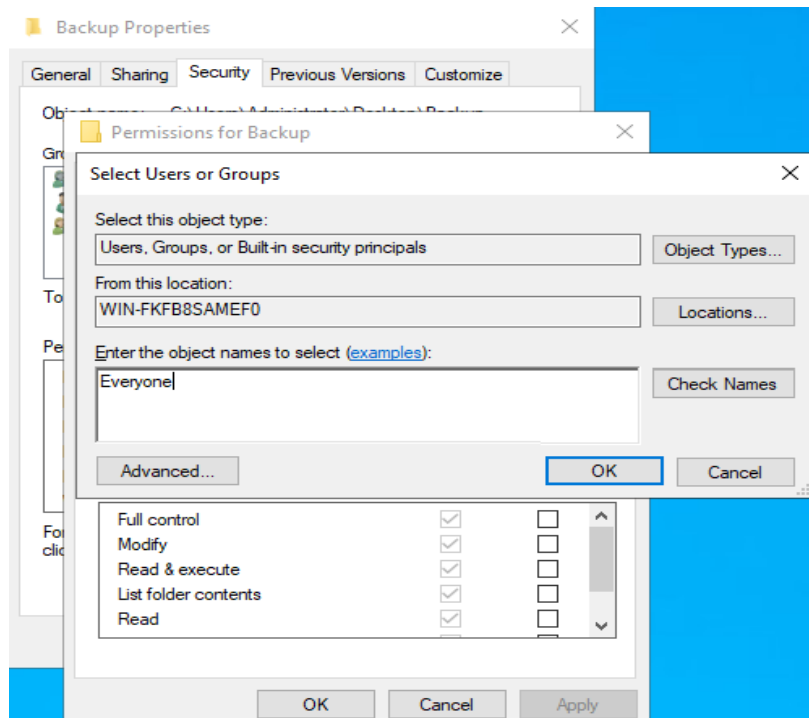


6. Allow -> dar check no “Full Control”

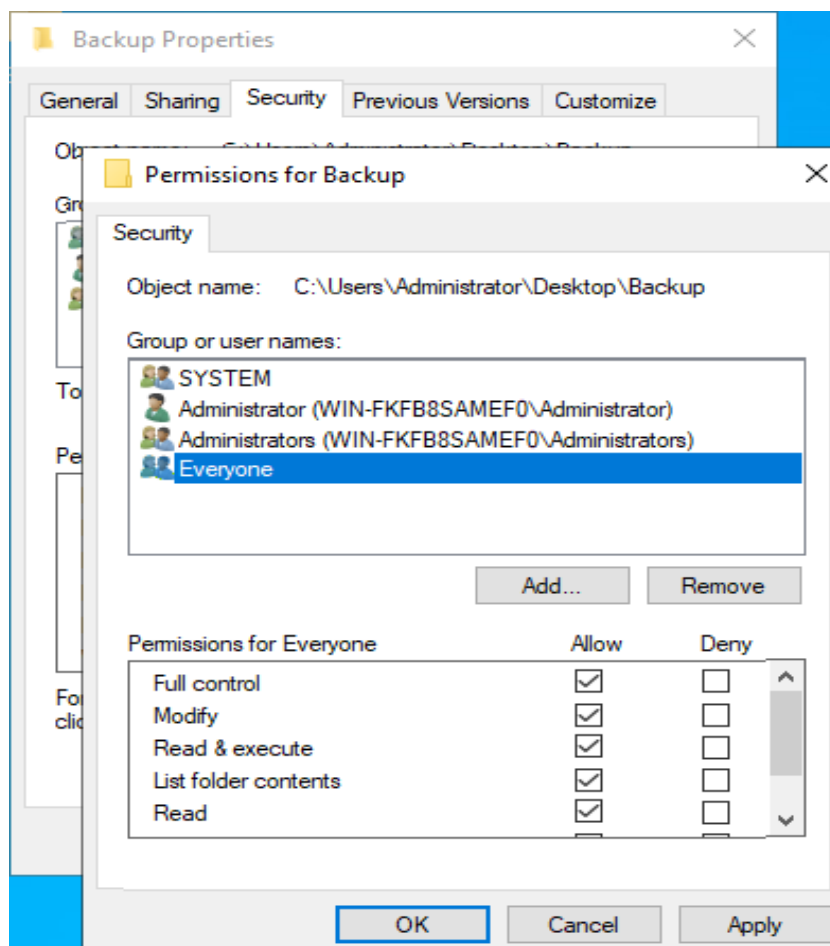

7. É suposto agora abrirem o Windows 11, e na secção Network, ver o Windows Server.

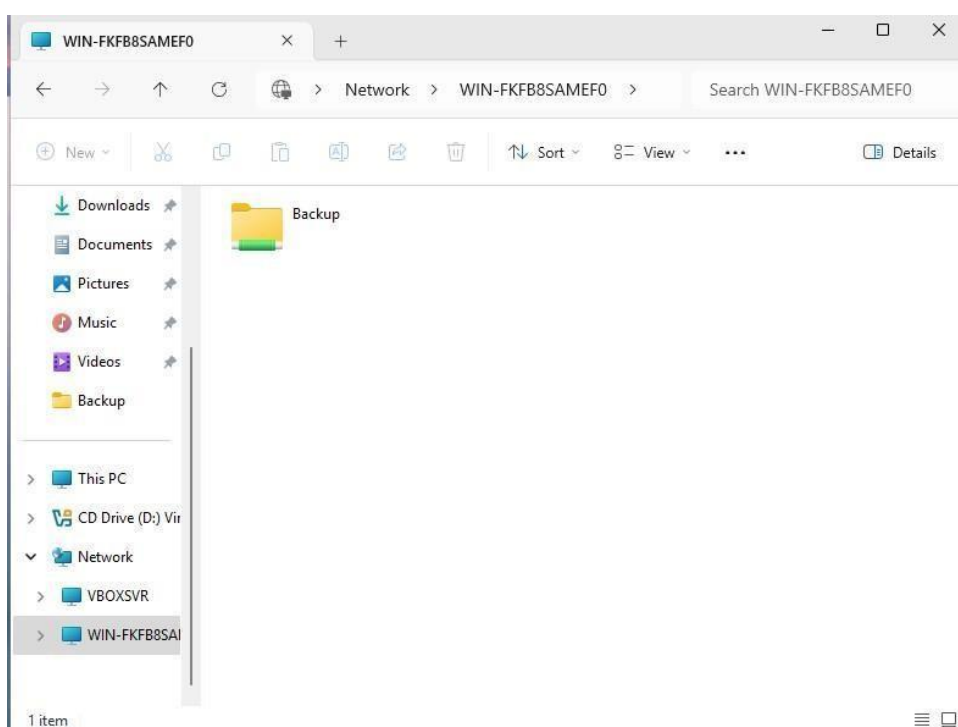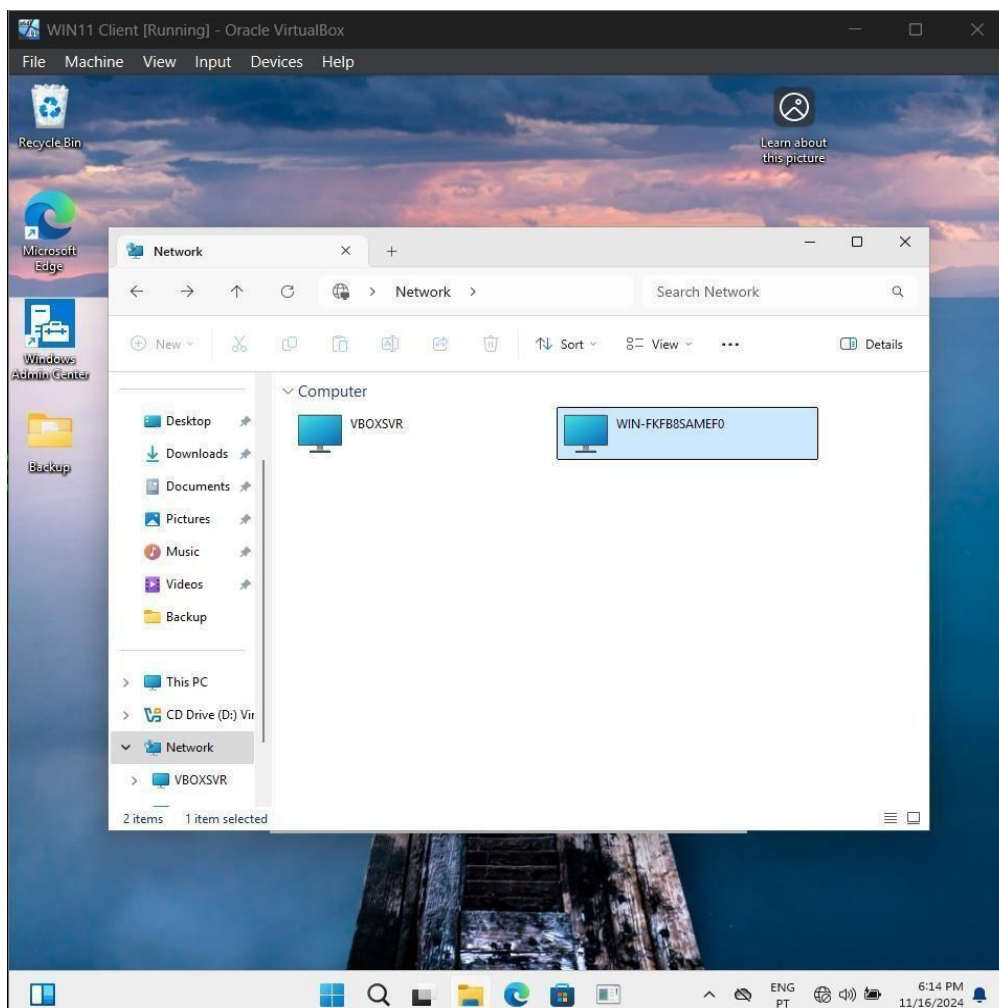

8. Voltando novamente ao Windows Server:

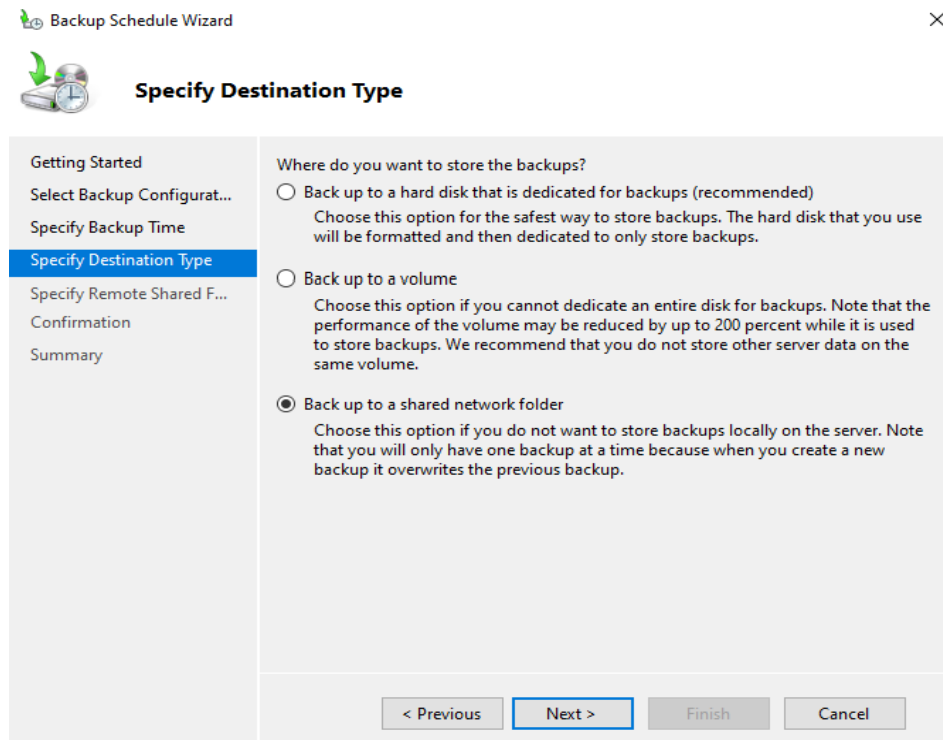

Backup Schedule Wizard

Specify Destination Type

Getting Started
Select Backup Configurat...
Specify Backup Time
Specify Destination Type
Specify Remote Shared F...
Confirmation
Summary

Where do you want to store the backups?


☐ Back up to a hard disk that is dedicated for backups (recommended)
Choose this option for the safest way to store backups. The hard disk that you use will be formatted and then dedicated to only store backups.

☐ Back up to a volume
Choose this option if you cannot dedicate an entire disk for backups. Note that the performance of the volume may be reduced by up to 200 percent while it is used to store backups. We recommend that you do not store other server data on the same volume.

☒ Back up to a shared network folder
Choose this option if you do not want to store backups locally on the server. Note that you will only have one backup at a time because when you create a new backup it overwrites the previous backup.

< Previous Next > Finish Cancel

9. Insiram agora o nome do shared folder e de seguida será pedido a inserção das credenciais do Windows Server. (User: Administrador / Password: [...])

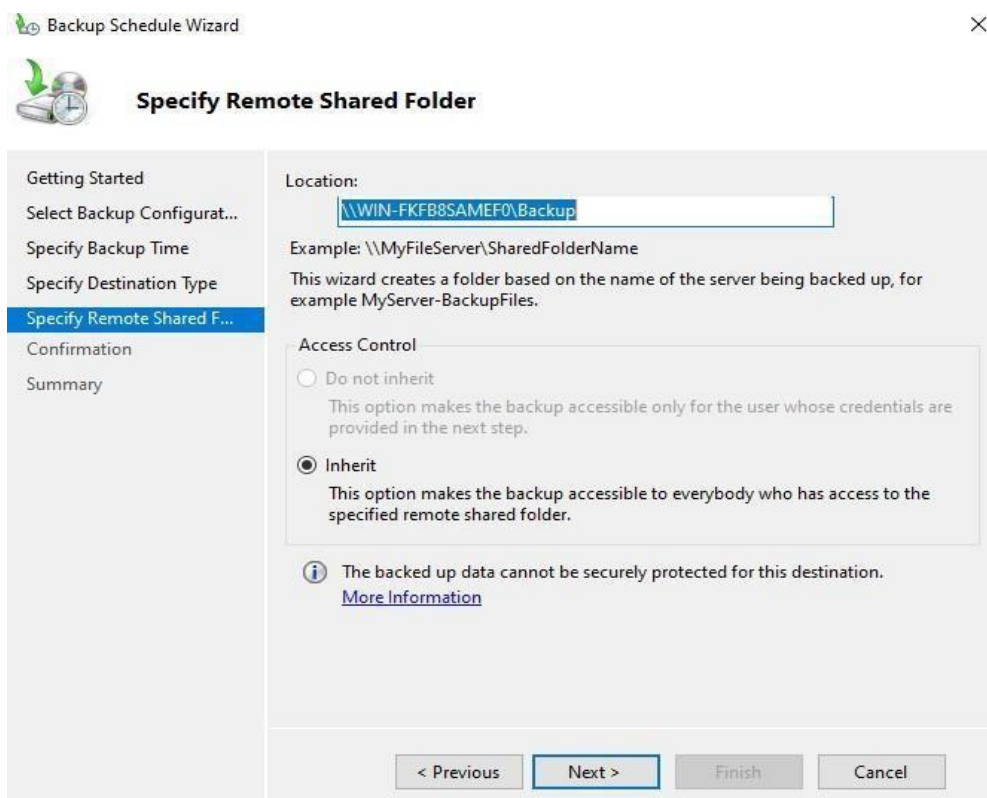

Backup Schedule Wizard

Specify Remote Shared Folder

Getting Started
Select Backup Configurat...
Specify Backup Time
Specify Destination Type
Specify Remote Shared F...
Confirmation
Summary

Location:

Example: \\MyFileServer\SharedFolderName
This wizard creates a folder based on the name of the server being backed up, for example MyServer-BackupFiles.

Access Control



☐ Do not inherit
This option makes the backup accessible only for the user whose credentials are provided in the next step.

☒ Inherit
This option makes the backup accessible to everybody who has access to the specified remote shared folder.


i The backed up data cannot be securely protected for this destination.
[More Information](#)

< Previous Next > Finish Cancel

10. Escolher onde guardar

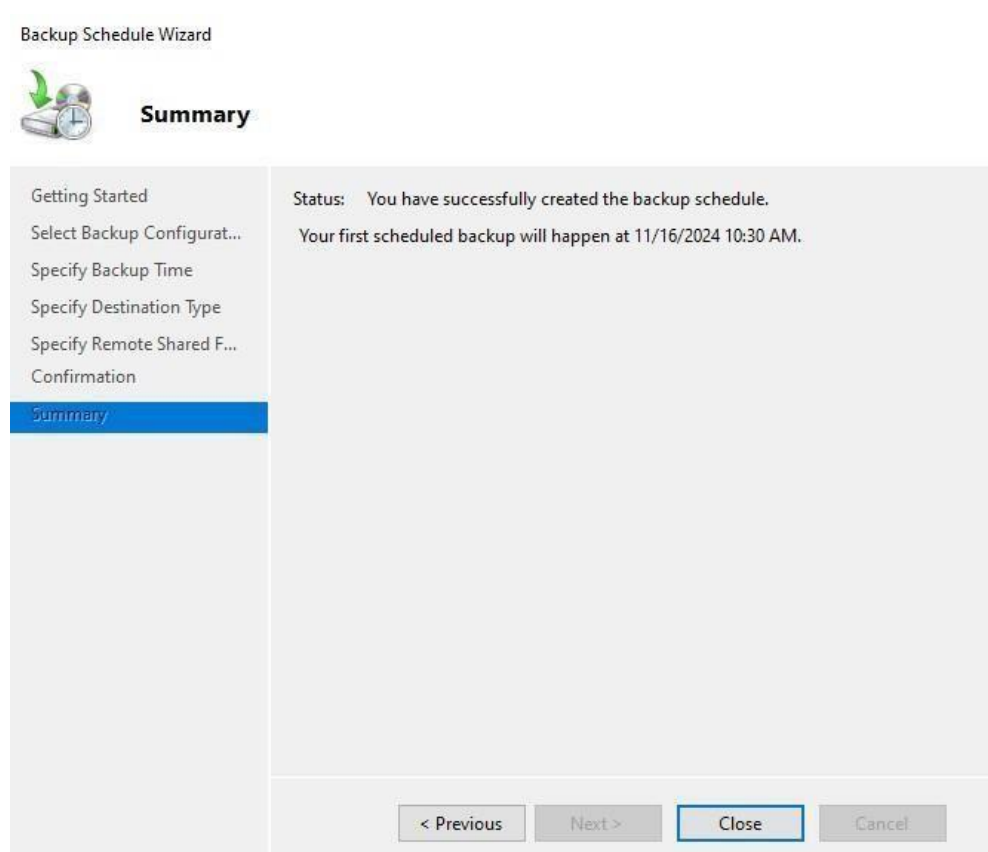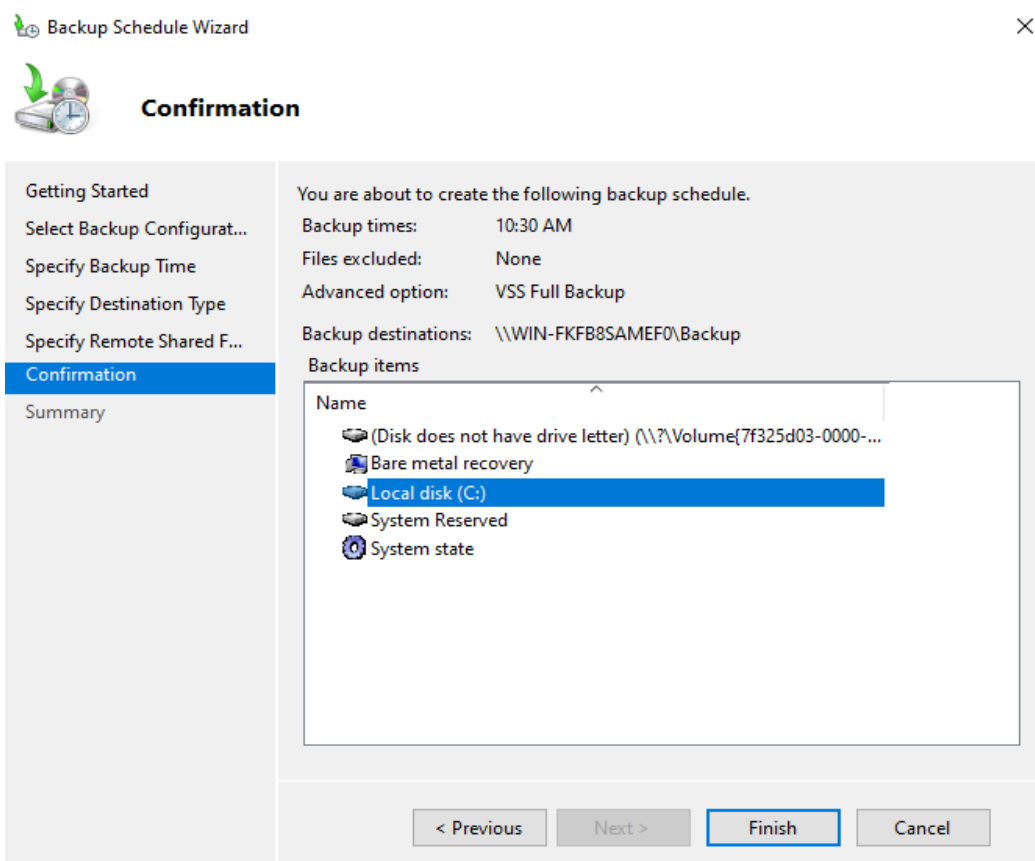

11. Resta esperar que o backup seja efetuado e podem então verificar a vossa pasta:

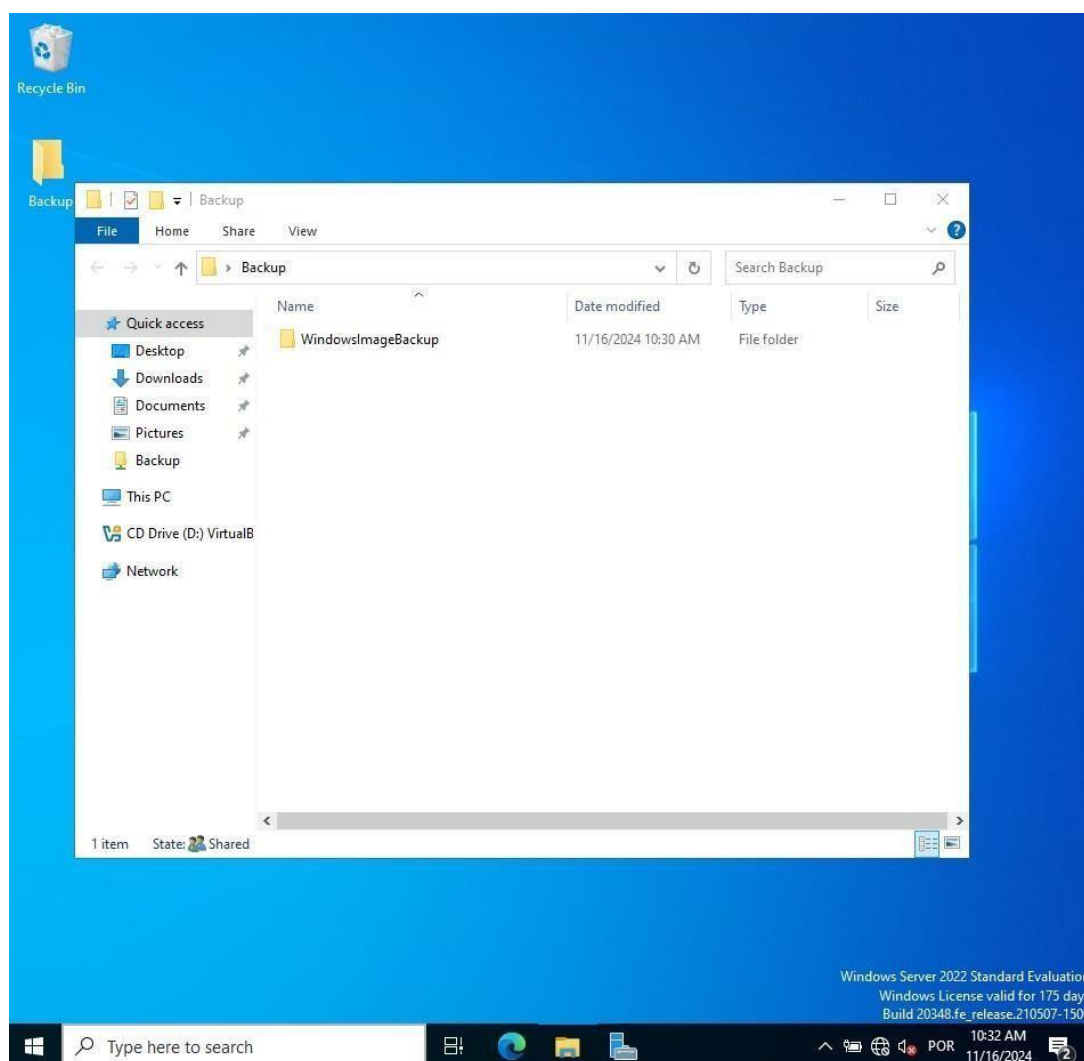

Bibliografia

<https://www.backupassist.com/blog/the-grandfather-father-son-backup-scheme-explained> - *GFS Explained*

<https://www.youtube.com/watch?v=elODShatt-c> - *AzureOverview*

<https://www.howtogeek.com/best-ways-to-backup-windows-to-external-storage/> - *3 Best Ways to Backup Windows to External Storage*

[https://learn.microsoft.com/en-us/previous-versions/windows/it-pro/windows-server-2012-r2-and-2012/jj614621\(v=ws.11\)](https://learn.microsoft.com/en-us/previous-versions/windows/it-pro/windows-server-2012-r2-and-2012/jj614621(v=ws.11)) - *Windows Server Backup Feature Overview*

<https://www.techtarget.com/searchdatabackup/tutorial/How-to-use-the-Windows-Server-Backup-tool> - *How to use the Windows Server Backup tool*

Fim